

# INSTALLATION & USER INSTRUCTIONS

## LED ELECTRIC STOVE



Focal Point Fires plc.  
Christchurch, Dorset BH23 2BT  
Tel: 01202 499330  
Fax: 01202 499326  
[www.focalpointfires.co.uk](http://www.focalpointfires.co.uk)  
e : [sales@focalpointfires.co.uk](mailto:sales@focalpointfires.co.uk)

### MODELS COVERED BY THESE INSTRUCTIONS

LEIRVIK LED ELECTRIC STOVE

DALVIK LED ELECTRIC STOVE



MODEL SHOWN : LEIRVIK LED ELECTRIC STOVE

Questions or problems with your appliance?

**Don't take it back to the store**

just give us a call on **01202 588601** we're here to help  
lines open between 9am and 5pm, Monday to Friday

**3 YEAR GUARANTEE**

SUBJECT TO TERMS & CONDITIONS

For details please see: [www.focalpointfires.co.uk/tandcs](http://www.focalpointfires.co.uk/tandcs) or telephone  
01202 588635 Option 7

Please note : Except where otherwise stated, all rights, including copyright in the text, images and layout of this booklet is owned by Focal Point Fires plc. You are not permitted to copy or adapt any of the content without the prior written permission of Focal Point Fires plc.

**All instructions must be handed to the user  
for safekeeping.**

Revision B - 10/14

© 2014 Focal Point Fires plc.

Section	Contents	Page No.	Section	Contents	Page No.
1.0	Preliminary Notes	2	7.0	Operating The Appliance	4
2.0	Appliance Data	2	8.0	Safety Cut-Out System	5
3.0	Installation Requirements	2	9.0	Cleaning And Maintenance	5
4.0	Unpacking The Appliance	3	10.0	Servicing	5
5.0	Component Checklist	3	11.0	Appliance Dimensions	5
6.0	Installing The Appliance	3	12.0	List Of Replacement Parts	6
			13.0	Guarantee - Terms And Conditions	6

## 1.0 PRELIMINARY NOTES

The LED electric stove provides convected heating in conjunction with a LED screen which can display a number of different fuel effects and scenes. The appliance is designed for indoor use, and can be floor mounted in the majority of floor positions. It can be located in any household room, with the exception of bathrooms. Read all of the instructions before commencing installation. Retain for future reference and pass on as necessary to subsequent owners of the appliance.

- **DO NOT** use this appliance immediately below a fixed socket outlet.
- **DO NOT** use this appliance in the immediate vicinity of a bath, shower, swimming pool or other area where water/moisture could present a hazard.
- **CAUTION:** This appliance must not be used in conjunction with any timer, programmer or thermal control, or any other device that will switch on the appliance automatically, as a fire risk may occur if the heaters are accidentally covered or displaced.
- **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention must be given where children and vulnerable people are present.
- **WARNING:** Children of less than 3 years should be kept away unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform maintenance.
- **WARNING:** This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

Do not allow the heater to be covered as this may cause overheating. The appliance must not be placed near curtains or similar material. A clearance space of at least one metre must be allowed in front of the appliance.

The electrical socket that the appliance uses **MUST** be easily accessible. Do not route the supply cord directly over or above the heater unit. If the cord is damaged, it must be replaced by a service agent or competent person.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

The LED displays are produced using highly accurate technology, however, black pixels may be found. Red, blue and green pixels may not disappear. This is perfectly normal and within product specification. This should not be regarded as a fault.

## 2.0 APPLIANCE DATA

<b>Weight (kg):</b>	29 kg
<b>Voltage (Volts):</b>	230-240V a.c. 50Hz
<b>Heating Elements:</b>	2 x 1000 Watts
<b>Supply Cord:</b>	2 metres
<b>Supply Plug:</b>	BS 1363, 13A Fused
<b>Location:</b>	Indoor Use
<b>LED Display:</b>	40 Watts

## 3.0 INSTALLATION REQUIREMENTS

The appliance is supplied with a pre-wired three pin BS1363 plug (13Amp fuse rated) and 2 metres of electrical flex. It is therefore necessary for a suitable electrical socket to be located within this distance of the appliance and be easily accessible. The stove may be installed on a combustible or non-combustible floor, however the heater outlet is underneath the stove and certain types of floor covering may be affected by the heat produced by the stove. The ability of the floor covering to withstand the heat produced by the stove should be ascertained before proceeding with the installation of the stove. If in doubt then the stove should be mounted on a non-combustible hearth or plinth which extends for at least 150mm in front of the stove.

This appliance should be positioned on a firm level surface and in a clean 'dust free' environment. If the stove is to be sited in a fire surround then the suitability of the surround for use with electrical heaters should be established with the fire surround manufacturer.

If fitted into an open draught fireplace, it is advisable to block off the chimney to reduce the risk of draught through the stove which may cause the safety cut out system in the fan heater to operate. If the chimney to be de-commissioned then it should be ventilated to prevent the build-up of condensation or moisture which could damage to the structure of the building. If in doubt then seek professional advice.

### DO NOT

- site in a position where curtains or drapes could cover the appliance.
- site in a position where other soft materials could cover the appliance e.g. below a coat rack.
- site behind an opening door where impact/damage could occur.
- site where the supply cable would become a trip hazard.
- sit, stand on or forcefully pull on the appliance.
- obstruct, cover or force items into the openings.
- use the heater to dry clothes.
- site/use in an outdoor location(s).
- run the supply cable under carpets .
- mount on a wall
- position objects underneath or near the heater as they could cause a fire risk
- position the appliance underneath any objects that prevent access to the control switches

## 4.0 UNPACKING THE APPLIANCE

Remove the outer packaging and remove any instructions. Read ALL these instructions before continuing to unpack or install this appliance. Lift off the remaining packaging components and remove the contents of the box. Check that the components supplied correlate with the component checklist. Please dispose of all the packaging materials at your local recycling centre.

## 5.0 COMPONENT CHECKLIST

QUANTITY	DESCRIPTION
1	Heater main body with decorative castings
1	Remote control handset
1	Mains supply cord
1	Instruction booklet
2	Levelling feet

## 6.0 INSTALLING THE APPLIANCE

### CAUTION: DO NOT CONNECT THE APPLIANCE TO THE ELECTRICAL SUPPLY AT THIS TIME

Situate the LED stove in the desired location. If the surface is uneven, fit two levelling feet behind the two front cast legs. Unscrew in a anti clockwise orientation to extend the feet and clockwise to contract the front legs. The fires levelness can be checked by using a spirit level.

Before finally fitting the appliance into its location, ensure that the mains cable and plug are properly routed.

## Read All Instructions Before Use

Check that the heater outlet grille, mounted beneath the appliance, is not covered or obstructed in anyway, and ensure the power to the fire is switched on. The power to the LED display panel and the heater functions are controlled using three switches mounted underneath the switch access panel at the top of the appliance.

## Controlling the heater functions

The first switch towards the left hand side, (marked OI), controls the main power to the appliance and switches on the LED display panel. This feature can be used independently of the heating features.

The next switch along, with a “single bar” (marked I) operates the low heat, (1kW), setting.

The switch on the right hand side, with “two single bars” (marked II), operates the high heat (2kW) setting.

To operate the fire in any of the above modes, the top switch (marked OI) must be switched to the “on” position.

## Controlling the LED display panel

**LED on/off control:** The LED display may be switched on and off independently of the heater functions by using the LED on/off button as shown in figure 10.

**Scene select buttons:** The appliance is pre-programmed with nine different scenes as shown in figures 1 through 9. These scenes have been specially edited to run in a seamless loop. When the appliance is switched on, the log fire scene will automatically run. To select a different scene press the appropriate scene select button to choose the desired scene. During normal operation the footage may occasionally be seen to ‘freeze’ for a fraction of a second. This happens as the scene is restarted to loop again. This is perfectly normal and should be no cause for concern.

**Volume up, down and mute button:** Some of the LED scenes include sound effects. These buttons raise and lower the volume. The Mute button mutes the speakers. While the speakers are muted, a symbol will be displayed on screen. Press again to de-activate.

**The appliance can be switched off at any time, irrespective of the particular mode selected, by simply switching the first switch marked (OI) to the “off” position. It is also recommended to unplug the power supply cable at the supply outlet when not in use.**

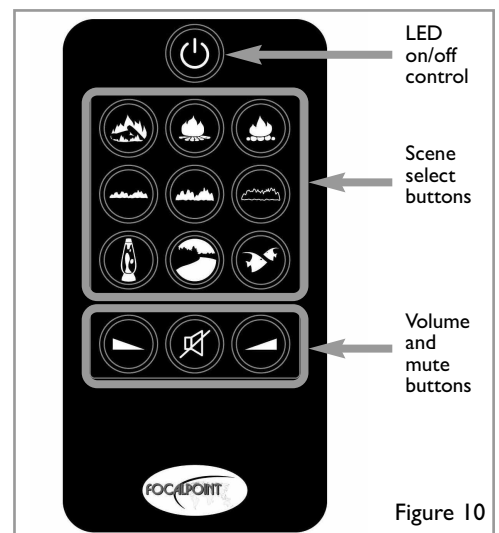
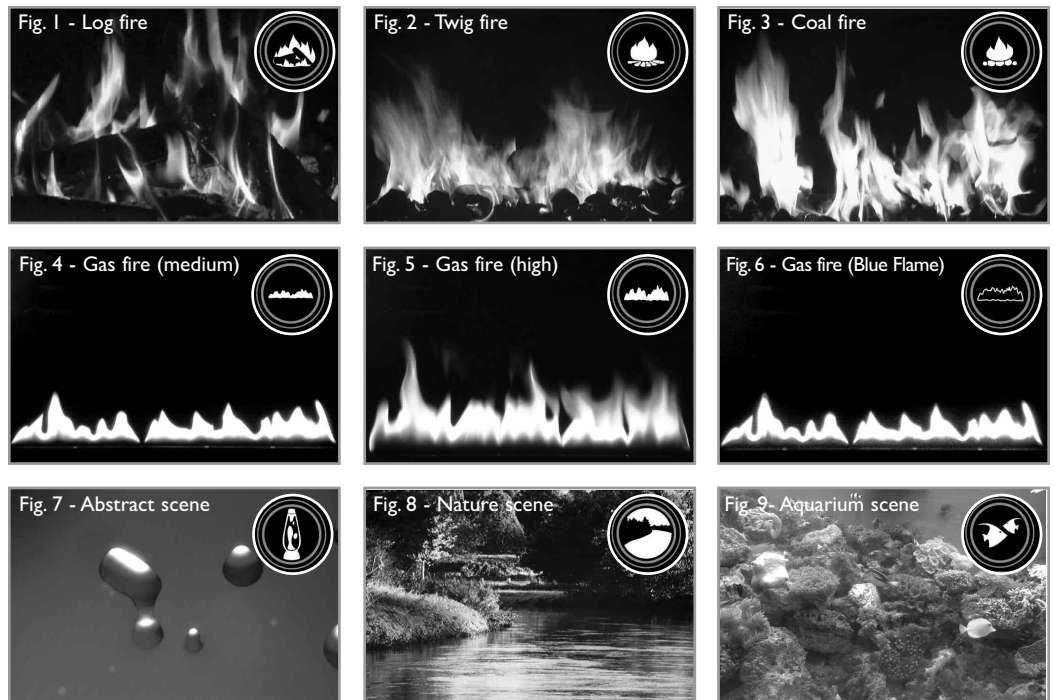


Figure 10

## 8.0 SAFETY CUT-OUT SYSTEM

GB IE

This appliance has a safety cut-out system fitted which will activate if the air inlets or heater outlets are obstructed. For safety reasons the fire **WILL NOT** switch on again automatically.

**NOTE: The LED display panel will remain operational if the cut-out is activated, only the fan heater elements are prevented from operating.**

**The following procedure must be carried out before the fire can be operated again:**

1. Unplug the power supply cable at the outlet socket and place all switches to off at the appliance.
2. Leave the fire OFF for a minimum of 10 minutes ensuring any obstructions are removed.
3. Plug in the power supply cable at the outlet socket, and then switch on at the appliance.

If the appliance fails to operate correctly, repeat the above procedure. If an attempt to switch on is made before the safety cut-out has reset, the heaters may cut-out for a further period of time. If the sequence has been followed correctly and the heaters still fail to function, check the power supply cable plug is plugged in at the outlet socket. If this is not the cause, call an electrician.

## 9.0 CLEANING AND MAINTENANCE

**ALWAYS DISCONNECT THE APPLIANCE AT THE SUPPLY OUTLET SOCKET BEFORE UNDERTAKING ANY CLEANING.**

Except for periodic cleaning, there are no specific requirements for care. A wipe with a dry cloth is normally sufficient. **DO NOT** use abrasive cleaners as they may damage the finish. Make sure the heater outlet grille (located beneath the appliance), and the air inlet mesh grilles are kept clear of dust, pet hair and other airborne household matter. These should be vacuum cleaned periodically using a brush attachment.

**GLASS SCREEN** - This should only be cleaned using a suitable glass cleaner. Test on a small area first.

## 10.0 SERVICING

**There are no internal user serviceable parts.**


Check security of supply cable and connections. If the supply cable becomes damaged, it must be replaced by a service agent or competent person, such as a qualified electrician.

The wires in the cable are coloured in accordance with the following code:

<b>LIVE</b>	- Brown
<b>NEUTRAL</b>	- Blue
<b>EARTH</b>	- Green/Yellow

Refer to Section 2.0, Appliance Data for fuse specification. Excluding fuses, use only genuine manufacturers spare parts available from your supplier.

## 11.0 APPLIANCE DIMENSIONS

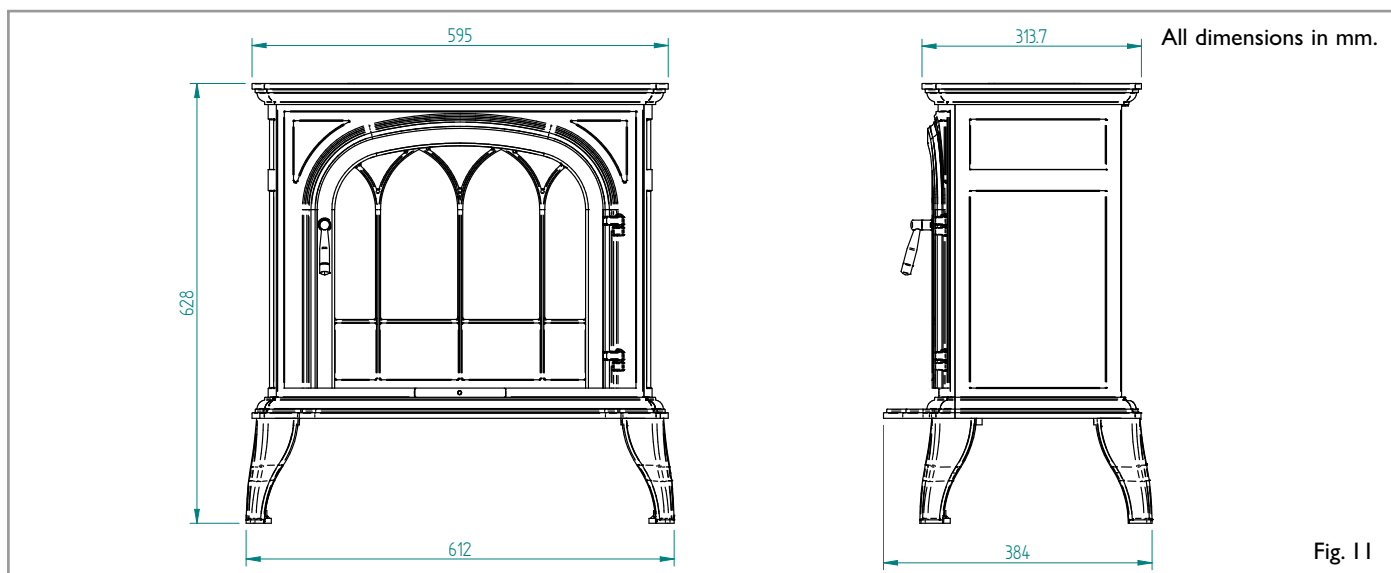

PART NO.	ITEM
F930151	LED screen
F930358	SD card
F930305	Handset
F930182	Heater element
F930217	Fan
F930158	IEC connector
F930121	Switch ON/OFF
F930123	Switch 1kW
F930124	Switch 2kW
F920111	Glass panel

## 13.0 GUARANTEE - TERMS AND CONDITIONS

Registration is not required.

Appliances purchased prior to 1st February 2009, and those specifically marked as '1 year guarantee' on the Focal Point Fires website, are guaranteed for one year from the date of purchase, provided that the following three terms and conditions are adhered to:

1. For any claim to be made within 1 year from date of purchase you will be required to provide and supply us with your original proof of purchase.
2. All appliances must have been installed and operated in accordance with the manufacturer's instructions.

### 3 Year Guarantee Terms and Conditions

Please be advised that the 3 year guarantee only covers products purchased on or after 1st February 2009.

The 3 year guarantee is only applicable to purchases made through an authorised stockist/retailer. Please see our website for a list of authorised stockists. Any purchase(s) made through an unauthorised stockist(s) will be eligible for a statutory 1 year guarantee.

For all electric fires purchased the 3 year guarantee commences from the date of purchase, provided that the following 2 terms and conditions are adhered to:

1. For any claim to be made within the 3 years from date of purchase you will be required to provide and supply us with your original proof of purchase.
2. Purchase(s) must be made through an authorised stockist/retailer.

Please note all consumable items such as any ceramics including: coals, pebbles, the matrix, front strips, side cheeks, rear panels and tapered rear panels are not covered by the 3 year guarantee.

During the guarantee period any product or component which is proved to be faulty or defective in manufacture, will be repaired or replaced free of material and labour charges, providing that we have authorised or carried out the repair or replacement.

We will not accept or reimburse the costs of any third party who undertakes any work carried on the product or fits parts, unless we have approved such work in advance of it being carried out.

The guarantee period will not be extended even if we repair or replace any product or part.

For all electric fires purchased the 3 year guarantee commences from the date of purchase, providing that you can supply the proof of purchase. This does not cover consumable items such as pebbles, coals or light bulbs. Purchase(s) must be made through an authorised stockist.

### Making a claim

Making a claim is easy. If you wish to make a claim under our guarantee and all the terms and conditions for your product have been met then please submit the following information for the attention of the 3G Service Department to the address below. Alternatively, you can email or fax.

Focal Point Fires, 3G Service Department, Reid Street, Christchurch, Dorset, BH23 2BT.


Email: [3g@focalpointfires.co.uk](mailto:3g@focalpointfires.co.uk),

Fax: 01202 588639.

### Details required:

1. Name, full address including postal code and contact telephone number.
2. A copy of your proof of purchase e.g. receipt or bank statement.

Please note that this does not affect your statutory rights.

 Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice. As our policy is one of continuous improvement and development, we therefore hope that you will understand we must retain the right to amend details and/or specifications without prior notice.